


Step-by-step breakdown of how to self-administer

Follow the screening process for self-administered tests as shown in the 8 steps below:



Step 1

Insert swab into each nostril about one inch deep and swirl five times.

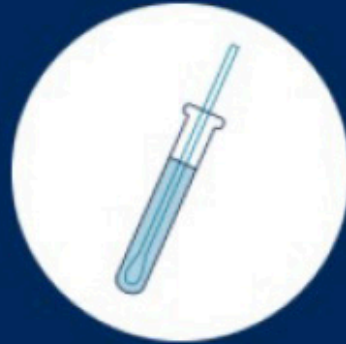


Step 2

Insert the swab into the prepared tube.



Step 3

Swirl the swab tip in the buffer fluid for 15 seconds.

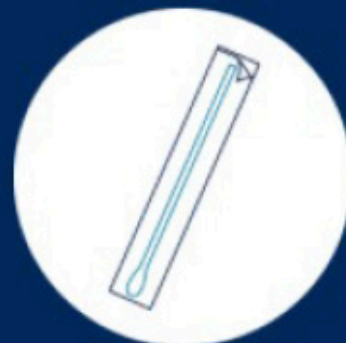

Step 4

Remove the swab from the vial and replace swab in packaging.



Step 5

Place the lid attached to the vial on top of it to create a dropper.




Step 6

Invert dropper and put three drops into the testing device well.



Step 7

Set a timer for 15 minutes.

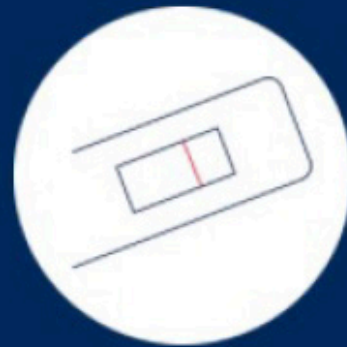

Step 8

After 15 minutes check the device for your test result.

One red line = negative
Two lines = presumed positive